iVIEW®

iVIEW-750PDVX

USER´S MANUAL

7"PORTABLE MEDIA PLAYER

To assure the product to work in best status
Please read the users manual carefully before operation and keep it well for future use

PDF created with pdfFactory Pro trial version www.pdffactory.com

FOREWORD

To our customers:

Welcome to join us!

Thank you for your favor, we are very pride to serve you with our consistent high-quality products.

In order to bring your device functions into full play, it is strongly suggested that you should read this *"OPERATION MANUAL"* carefully before system connection and operation so that you can understand well about the connection method and key points, thus, your enjoyment can be acquired from the very start. You will find that all the design features、manufacture process、working performance as well as operation control can meet your high requirements.

Please keep this operation manual carefully for the future reference!

Out of box audit:

Please unpack the package carefully and place all the accessories at the same position in case lost.

Please check the appearance of player to see if there is any damage, if any, please contact the local dealer for solution. If your player device comes from one shipping company directly, you may contact them for solution. In addition, only the consignee (person or company) has the right to claim the compensation to carrier concerning the damage.

It is suggested that you should keep the former box and packing materials for the future use.

Main features:

◇7 inch fine definition environment friendly wide screen (16:9) LCD

◇ Support DVD/VCD/CD and other standard formats , available to unscramble MP3/CD-R/RW and Picture CD, etc.

◇Ultrastrong picture stabilization, intelligent power-off memory play

◇Stereo audio, composite video signal I/O function

◇Built-in high-energy battery with intelligent charging function

◇unscrambling some net music and movie available.

◇With USB/CARD interface, support to read the audio or video files in USB /SD、MMC、MS card.

◇ By intelligent auto sleeping、screen protection, save power energy effectively with protection for player.

◇ Multi-subtitle and multi-dubbing voice

◇ Through limit lock, prevent the children from watching improper video.

◇ With multi-format system, available to switch among PAL/NTSC and AUTO three modes to adapt different TV video input.

◇ English file name and path name display for MP3,mp4.

PDF created with pdfFactory Pro trial version www.pdffactory.com

Contents

SUPPLIED ACCESSORIES 1
IMPORTANT NOTICE 1
IMPORTANT SAFETY NOTICE 1
DISK MAINTENANCE 2
OUTLINE VIEW 3
FRONT VIEW 3
SIDE VIEW 3
REMOTE CONTROL PROFILE 4
OUTLINE VIEW 4
SYSTEM CONNECTION 6
EARPHONE CONNECTION 6
PERIPHERAL UNIT CONNECTION 6
DUAL-CHANNEL AUDIO PLAY 7
ANALOG CONNECTION 7
AC ADAPTER APPLICATION 7
POINTS FOR ATTENTIONS 8
VIDEO DISC PLAY 8
OPERATION PROCEDURE 9
SEARCH AND SKIP 9
WHEN PLAY DVD/VCD 9
SUPTITLE SELECTION 9
REPEAT PLAY 9
MEMORY PLAY 10
AUDIO SWITCH 10
VOLUME、MUTE 11
PLAY TIME SETTING 11
Mp3 PLAY 11
JPEG DISK PLAY 12
USB/CARD PLAY 12
CD CONVERTING TO Mp3 13
FILE COPY 14
SYSTEM SETTING 14
SOMMON SETTING 14
AUDIO SETTING 15
VIDEO SETTING 16
PREFERENCE 16
FAQ 16
TECHNICAL SPECIFICATIONS 17
FEATURES 18

PDF created with pdfFactory Pro trial version www.pdffactory.com

SUPPLIED ACCESSORIES

IMPORTANT NOTICE:

REMOTE CONTROL

AV CABLE

EARPHONE

AC-DC ADAPTER

CAR ADAPTER

CARRYING BAG

MANUAL

IMPORTANT SAFETY NOTICE

Before use, please read the SAFETY NOTICE and *"operation manual"* carefully.
Please keep this "operation manual" for future reference.
Please understand the WARNING MARK on product completely.

1. Before clean the player, cut off the power. Forbidden to use liquid or fog-detergent for cleaning, only soft cloth with water acceptable.
2. Do not use auxiliary or additional devices not recommended by manufacturer in case fault occurs.
3. Keep this device away from the position close to water like bathtub、washing-up sink or wet cellar or near swing pool.
4. Keep this device away from strong electromagnetic environment, it can deteriorate the image when used under strong fluorescent lighting or in car or approach the TV and alike.
5. Do not place this device onto unstable platform、bracket or table in case drop off.
   Only the table recommended by manufacturer or attached with payer acceptable
   Please carry out installation as the requirements in MANUAL and use recommended accessories.
6. Before move the video disc player, please take out the disk, and move it carefully. All the emergency-stop、overexertion or uneven ground can reverse this device.
7. With wide AC adapter, the power supply can be available at the range of AC100V-240V (50/60Hz), so please confirm that if the local power supply is consistent with the one of this device, otherwise, it failed to play, even broken down.
8. Sort up the power cord to avoid being trample or pressured by heavy object, in addition, the cable of plug as well as interface should be checked as well.
9. When encounter thunder weather or long term nonuse, please pull out the plug and cut off the connection with antenna, in this way, the damage and electric short caused by thunder can avoided.

PDF created with pdfFactory Pro trial version www.pdffactory.com

10. Do not use wall socket or expanding socket to bear heavy power loading in case fire or electric shock occurs.
11. Prevent the outer object or liquid from entering the inner of device in case fire or electric shock emerges.
12. Please do not open or remove the outer housing, also any attempt to make self-maintenance prohibited in case result in high-voltage electroshock or other dangers, in addition, only the professional person can repair
13. In order to extend the service life, the continuous close interval should be over 10 s.
14. Do not place this device at the position close to electric heater、 burner or other heating positions
15. When on travel, do not watch disk like driving or walking in case cause injury.
16. Screen maintenance
    Before open the CD-DRIVER, please confirm that the player has been open up over 60° in case the cause damage to screen. Do not apply force strongly in case result in damage to the glass screen. Please keep the screen clean, and use soft-cloth to wipe after power-off.
17. Do not put the video disk player onto your led for long time in case result in light scald by the heating of device.
18. Power-energy saving
    When not use video disk player, please cut off the power, while for long time nonuse, please pull out the plug.
19. Avoid the video disk player dropping off and prevent it from sharp vibration.
20. When on plane, please comply with the regulations and related.
21. When load or remove the disk or clean, please do not scuff the photometer head.
22. After use, please take out video disk and close video disk player.

NOTE:ANY CONTROL、ADJUSTMENT NOT SHOWN IN OPERATION MANUAL MAY RESULT IN HEATING OR BLASTING AND OTHER DANGRS.

DISK MAINTENANCE

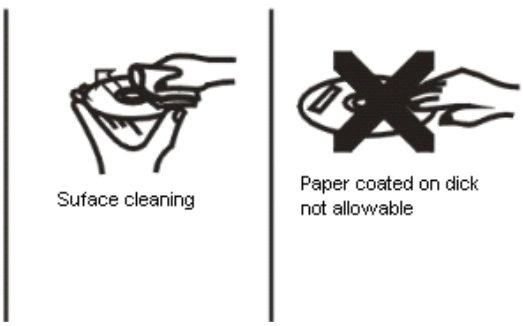

- Avoid scuffing on disk as much as possible, and place it into box after use.
- When clean the disk, use soft and clean cloth to wipe from the center to outer side
- Forbidden to alcohol or detergent and other chemical materials to clean disk
- Keep the disk from hot resource, do not bend it or paste rubber paper onto it, also writing on disk not acceptable.

PDF created with pdfFactory Pro trial version www.pdffactory.com

OUTLINE VIEW

Front view

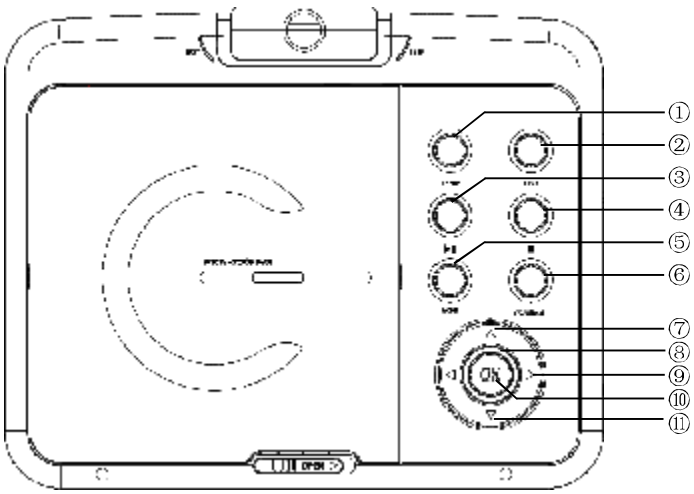

① Setup
② LCD menu
③ Play/pause
④ Stop
⑤ Mode
⑥ DVD/USB/SD
⑦ Up
⑧ Left
⑨ Left
⑩ OK
⑪ Down

Side view

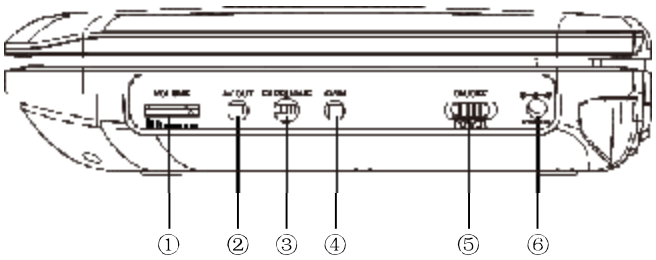

① Volume control
② Audio and video signal output port
③ Audio output headphone jack
④ Audio and video Input Interface
⑤ Power switch button
⑥ Power input interface
⑦ USB Input Interface SD/MS/MMC
⑧ Card Input Interface

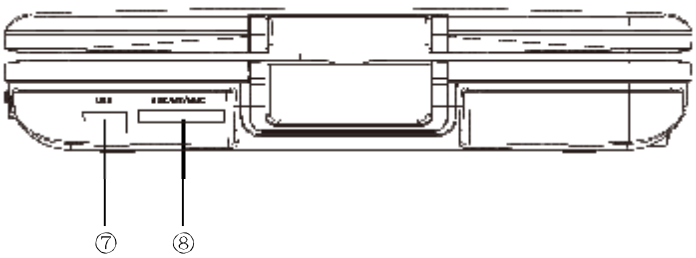

PDF created with pdfFactory Pro trial version www.pdffactory.com

REMOTE CONTROL PROFILE

Outline view

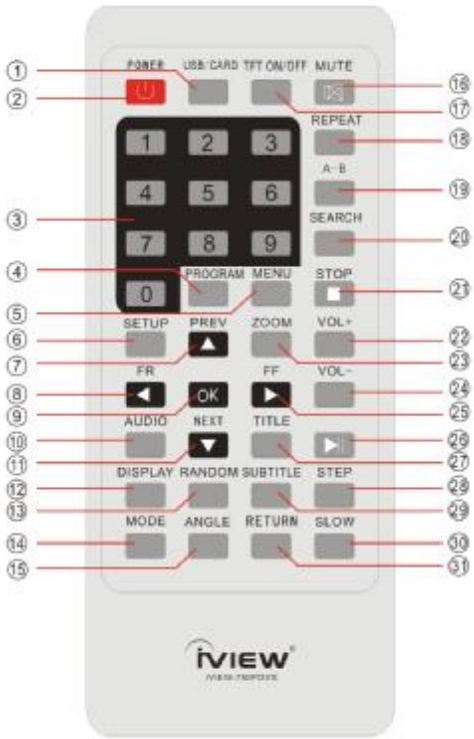

NOTE:

1. Do not put the remote control in the wet and hot environment in case broken down.
2. For long time nonuse, please take out the battery in case erosion occurs.
3. The service time of batter depends on the type of battery as well as use frequency. If the remote control is invalid when used close to player, please change the battery with new ones, in addition, please prevent the remote control from dropping off.
4. When use remote control, make the infrared emitter window toward the receive window of video disk player at the angle range of ±30° and the distance should be controlled within 7m.
5. If any foreign matters sticking onto windows, the receiving or emission may be out of order.

001. CARD EXCHANGE: use this key to enter DVD\USB/CARD directly, and then select the signal source as oriented, after press ENTER key for confirmation.

002. ON/OFF: used to turn on or off power (right side)

003. On menu, these digital keys can be used to input the specified value or select the corresponding chapter or song.

004. PROGRAMMING KEY: when read the VCD or DVD disk, this key can be used to program your favourite songs, just after press this key and input the number, but this program can not be played repeatedly.

PDF created with pdfFactory Pro trial version www.pdffactory.com

005. On menu, these direction keys can be used to move the cursor or regulate the value, besides, available to select the previous or next song as well as FAST FROWARD OR REVERSE.

006. SET: press this key to enter system menu, press it again to quit.

007. PREV and UP function.

008. FR and LEFT function

009. OK: on menu, press this key to enter the specified item or confirm the selection of one item.

010 AUDIO: press this key to switch the language for DVD disk or the sound channel for VCD disk.

011. NEXT and DOWN function

012. SCREEN DISPLAY: press this key to switch or hide the play message of current disk.

013. RANDOM KEY: press this key to enter random play mode.

014. MODE: Press this key to switch between DVD/AV to enter the corresponding signal source.

015. ANGLE： used to switch into different shooting angle to red multi-angle DVD.

016. MUTE: press this key to close the audio output, press it again to resume.

017. LCD SWITCH: press this key to close LCD backlight to save power energy.

018. REPEAT: press this key to switch to REPEAT mode. (NOTE: this key is alive only when the PBC functions have been closed)

019. Press this key to enjoy one segment of the disk repeatedly. When play, press this key to memorize the initial point A and press it again, the terminal point B will be recorded, thus the segment from point A to B will be played repeatedly. If press this key for a third time, the current selected segment will be canceled and recovery to normal. In addition, the point A and B must be contained in the same title or song.

020. SEARCH: after press this key, and then use direction key as well as number key to select the specified title、chapter 、song、title time、chapter time as well as song time for play.

021. Press this key to suspend the current play, you may press [▶II] to resume. Continuous two times press can stop the current play.

022. VOLUME+: press [VOLUMT +] key to enhance the loudness,

023. ZOOM: press this key to enlarge screen by 2、3、4 times, then press direction key to move the enlarged screen.(NOTE: only for DVD, VCD, MPEG4, etc.)

024. VOLUME-: while press [VOLUME-] key can lower down the loudness.

025. FF and RIGHT function

026. Press this key to suspend the current play, press it again key to resume.

027. TITLE: press this key to return to the title menu of DVD disk.

028. STEPPING: used to enter into stepping play mode.

029 SUBTITLE: press this key to display or switch the subtitle language or close the subtitle.(NOTE: only for the disk with subtitle). When play MP3 or AVI format, it is available to copy the specified content into U-disk or SD card.

030. SLOW: used to slow down the play speed when under play mode.

031. RETURN: used to return to previous

PDF created with pdfFactory Pro trial version www.pdffactory.com

SYSTEM CONNECTION

Earphone connection

When want to enjoy privately, you may use mini-earphone to insert into the jack on this player.

1. Insert the earphone into the jack.

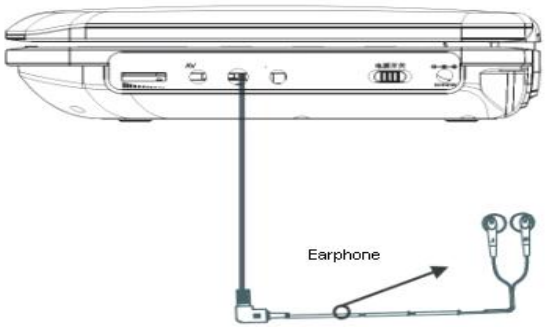

NOTE:

- Before connect earphone, turn the volume of earphone to minimum
  REAMRK:
- After insert the earphone, the loudspeaker of video disk player will be invalid.

2. VOLUME+/- application.

Peripheral unit connection

Equipped with audio/video output jack, so it is available to connect this player with TV to water the program, also you may use one data wire to connect the audio/video input jacks with the output jacks of video player to enjoy the program on the screen of this player.

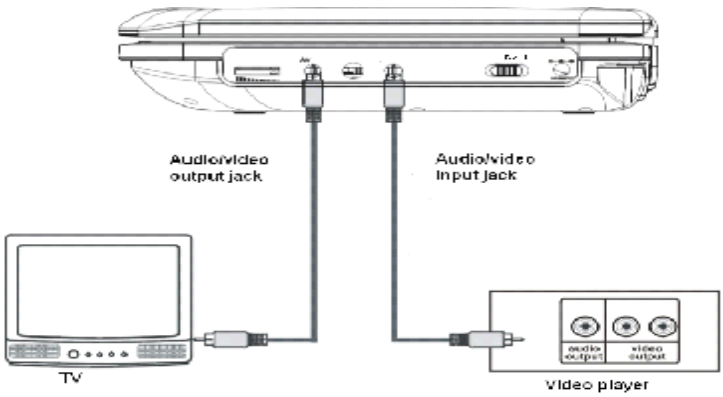

NOTE:

- **Before any connection, please turn off the video disk player and outer units.**
- **Please refer to the "Operation Manual" for solution of the connection method of external units.**

PDF created with pdfFactory Pro trial version www.pdffactory.com

REMARK:

- **When connected with TV, please turn off the screen display of video dick player, also the remote control to operate is still available.**
- **Press "Screen ON/OFF" key to close LED display for power energy saving.**

Dual-channel audio play

Connect the video disk player with audio system, you will hear high-quality sound.

Analog Connection

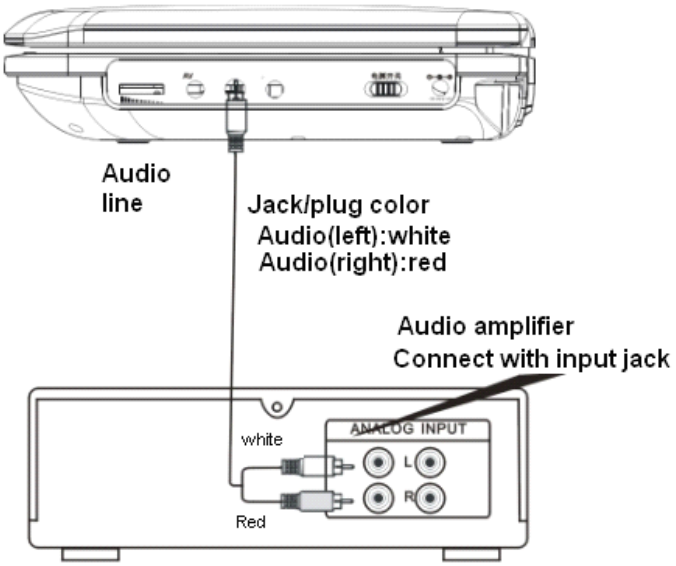

AC adapter application

With Li-Poly batteries (also called Lithium ion Polymer Battery) as power supply, this battery covers a wide advantages like high energy density、small volume、ultrathin structure as well as high security, etc. in addition, without the influence of memory effect, so the charging at any time acceptable.

Insert the AC adapter DC terminal into the DC jack, and then insert the other end into power socket, it takes about 3.5 h to charge the battery completely. Generally, the battery can be lasted abut 2 h after charged completely.

PDF created with pdfFactory Pro trial version www.pdffactory.com

POINTS FOR ATTENTIONS:

- **Any attempt to dismantle or reconstruct the battery prohibited, forbidden to make the metal object to touch the pole of battery.**
- **Please turn off the power switch when under charging. If the red lamp is ON, it means that the battery is now being under charging mode, and it will becomes green when completed. At this time, do not pull out the power cord immediately, just let it continuous for another more minutes.**
- **Only the attached battery is acceptable, using other adapter may result in damage or fault.**
- **When long time use, the adapter will become hot, this is normal.**
- **When nonuse, please pull out from socket.**
- **Keep the adapter away from wet、low temp or corrosive environment, otherwise, this will result in fire or electric shock.**

REMARK:

- **Only the attached AC adapter acceptable**
- **Before use, please separate the connection lines of adapter from other connection lines in case result in Electro Magnetic Interference.**

VIDEO DISC PLAY

Operation procedure

1. After power-on, open the upper cover board, turn the power switch at right side to "ON", the initial screen will be on.
2. The cover board can be rotated within 270 ° , please do not excessive this value in case cause damage to player.
3. Press "OPEN" key to open the CD-DRIVER and put the disk onto tray slightly（REM: the face with label should be upwards）
4. Close the CD-DRIVER, of which, the CD and VCD disks can be played several seconds later automatically, while for MP3 and DVD disk (with titles), it is essential to enter MENU firstly, then move the direction key at upper position of remote control to select the specified item, then press "ENTER" key for play.
5. Stop
   Just press STOP key to terminate the play.
6. Pause
   Just press the "⏯" key on player or remote control can suspend the current play.
   ---Screen halt without sound
   ---If want to resume, just press "⏯" key again.

7. Set up the scale of length/width/height of screen according to the type of your TV and the screen size.

PDF created with pdfFactory Pro trial version www.pdffactory.com

IMPORTANT NOTICES!

- **Before play, please confirm that the disk has been placed correctly, otherwise, this can result in fault to disk or disk player.**
- **For wrong placing or the area code not acceptable, there will be no image on screen.**

REMARK:

- **If the player is kept under STOP MODE over 3-4min without any operation, the screen protection will be activated, you may press "PLAY" for recovery.**
- **This ⊘ icon means the current operation is failed.**
- **Before stop completely, do not take out the disk.**
- **Turn the power switch to OFF position to shut down power supply.**

SEARCH AND SKIP

During play, available to use quick search or skip function to move at different segments.

1. If wan to select one song and the DVD、MP3 is under content menu, you may move the cursor to the specified song through up、down、left and right direction keys, and then press "ENTER" key for play; For VCD disk, just press the corresponding key to select the desire song.
2. When under playing VCD disk, you may press "⏮" key to skip into the previous one, and press "⏭"key for next one. When under playing DVD disk, you may press "⏭" to select the next chapter and press "⏮" for previous chapter.
3. If want to search one desire screen, press the ◀◀ or the ▶▶ and hold one second above, or press it continuously to select the desire speed at the range of 2X、4X、8X、16X and 32X to search the desire content.

WHEN PLAY DVD/VCD

1. For most DVD disk, there is main menu used to select "MOVIE PLAY"、 "SEGMENT SELECTION" and "LANGUAGE SELECTION" and alike, you may press "MENU" key to enter main menu.
2. Also the VCD2.0 disk can be played by menu, after read the disk, press "MENU" key to enter menu play mode, then press "⏮" or "⏭" key to turn page until the desire song has been found, than press the number key on remote control for play.
   In addition, you may press "■/⏻" key to return. When under sequence play mode, play "MENU" key to enter menu content.

NOTE: Partial function false when under VCD menu play mode.

SUBTITLE SELECTION

When there are different languages on the subtitle, you may press "SUBTITLE" key to select the desire language

REPEAT PLAY

When play AVI/DVD/VCD, the repeat mode available.

PDF created with pdfFactory Pro trial version www.pdffactory.com

For example: when play DVD, continuous to press "REPEAT" key, the screen will be displayed as follows:



REPEAT PLAY **REPEAT PLAY** **REPEAT PLAY**

If play VCD disk, continuous to press "REPEAT" key, the following will be on screen:

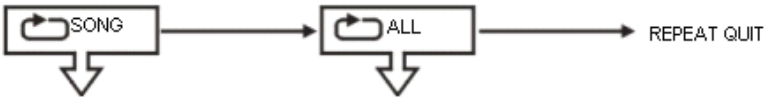

REPEAT PLAY REPEAT PLAY

If play VCD/DVD disk, you may specify one segment to repeat through "A-B" key.

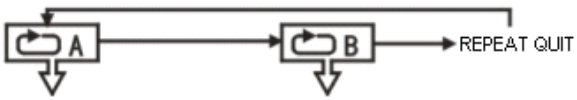

Initial Point A End Point B

NOTE: the operating method for other disks is the same to the one of DVD or VCD.

MEMORY PLAY

1. If you want to do other things temporarily, you may press "⏯" key, a "⏸" icon will be on screen and the player terminates playing, if want to continues, press this key again to resume.
2. Also you may press "⏹" key to make the play pause and enter false pause mode, here, the message of "please press PLAY key to continues" on upper left corner, you may press "⏯" or "CONFIRM" key for resume.
   NOTE: if you press "⏹" key two times, the play will be terminated completely, here, you can press "⏯"key for initial play.

3. During system setting, if you press "CD-DRIVER OPEN" key or "SLEEP" key due to careless, this player can play from the intermitting position automatically if you want to play again (NOTE: not support NETWORK MOVIE、JPEG and MP3 format)
   If you leave for a long time, you may select the third mode for solution.

AUDIO SWITCH

1. When play VCD songs press the "SOUND CHANNEL" key on remote control or player to switch between voice and obbligato so that the voice can be removed.
2. When play VCD, if there are two subtitles, press "CHANNEL" key for language switch.
   For example: if there are no PUTONGHUA and Guangdong Language, you may switch between these two languages.
3. When play DVD with multi-channel recording, press "CHANNEL" key on remote control to select the desire audio channel. (Only for the disk with multi-audio channels)

PDF created with pdfFactory Pro trial version www.pdffactory.com

VOLUME、MUTE

1. With special digital volume regulating, you may regulate the volume through “VOLUME +/-“ key on remote control for solution.
2. Press ”MUTE” key, a coin “🔇” will be on screen, at the same time, the output sound cancels, but the video image still goes on; if press it again, the sound resumes and display “🔊”.

PLAY TIME SETTING

Suit DVD/VCD
When play DVD or other disks, continues to press “TIME SELECTION” key, the following screen will be on:
For DVD: For VCD:

In the above screen, you may use the direction keys on remote control to move to the desire position, then use the number key to input the desire title、 chapter and time, or input the number of the desire song directly for automatic play.

REMARK:

- **When selection, the input chapter、title as well as the time should be within the total chapter、title as well as time, if excessive, you may press “TIME SELECTION” key to input new number.**
- **For MP3, only the desire song can be played.**

MP3 PLAY

Adopt the third audio compression mode of international standard MPEG to compress the audio signal. For MP3 format, one disk can contain over 600min music or 150 songs, the sound quality is similar to CD.
After put the disk into CD-DRIVER, this player begins to scan the disk and show the file name and path

1. Basic operation

A. use direction keys to move the cursor to director area, then press key to

PDF created with pdfFactory Pro trial version www.pdffactory.com

During play, continuous to press “Repeat Play” key to select the following play modes:
Single Play: play the current selected song till over
Single Repeat: repeat to play the current selected song
Directory Repeat: Repeat to play all the songs under the current directory
Directory Play: Play all the files under the current directory till over.

2. **Other points for attention:**
- **When play MP3, all the functions like mute、volume as well as pause available**
- **Some disks may not be played smoothly due to its poor process, not the fault from our player.**
- **If improper process for disk, the selected sequence No. may be different from the one on disk.**

JPEG Disk Play

When put the picture disk inside, this player will search the content and display the message as the right lower photo:
Press the direction keys on remote control to move the cursor to the desire directory, then press “ENTER” key to enter. Press direction key to select the desire picture and press “ENTER” key for play, also you may press number key directly to select the desire picture under the current directory.

A.PREVIOUS、NEXT and REPEAT PLAY

All of these operations are the same to MP3, please refer to MP3 play for details

B. PICTURE ROTATION

Press direction key to carry out rotation for desire picture, only under normal play mode, this operation can be implemented, in addition, you may press “ENTER” key to go through the sequential pictures.
The functions of each function keys are as follows:

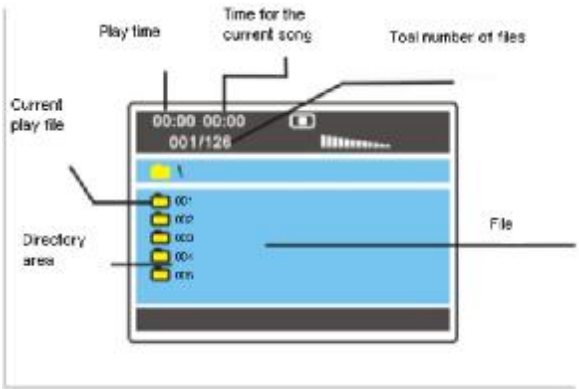

C. IMPORTANT NOTICE
- **the image quality depends on the resolution of your TV**
- **Available to decode the JPEG. There will be some deformation for some pictures side, but this is not the reason of our player.**

USB/CARD PLAY

Insert the USB disk or CARD (SD/MS/MMC) into the corresponding USB or CARD jack, if there is no disk in CD-DRIVER, this player can recognize the USB files automatically, on screen, it shows “Please wait” message, after read the USB disk or CARD, you may use direction keys to select the desire song and press “ENTER” key for play.

PDF created with pdfFactory Pro trial version www.pdffactory.com

During play, you need to press “DVD/USB/CARD” on player or “DVD/USB” key on remote control for switching into USB or CARD mode.

NOTE:

1. When USB or CARD plays, some functions may still be available.
2. During USB or CARD play, forbidden to pull out devices, otherwise, this will cause disorder or system halted.
3. Due to the transmission ratio of USB or CARD, if the compression ratio is over transmission ratio, the play may not be in trouble, this is normal
4. Support NETWORK MOVIE （partial AVI）、WMA、MP3 and JPEG format
5. Please use brand USB or CARD to assure normal play, if any trouble, please turn off power supply and pull out the USB or CARD and then restart.

CD CONVERTING to MP3

When play CD, press “SULTITLE” key to bounce one CONVERTING MENU, you may use this menu to convert the CD into MP3 to be saved in USB.

1) OPTION: move the cursor to desire item and press “ENTER” key fro detail setting
2) SONG: move the cursor to song list and press “CONFIRM” key to select or cancel converting
3) START: move the cursor to this option and press “ENTER” key to covert the desire song
4) QUIT: move the cursor to this option and press “ENTER’ key to quit.
5) ALL SELECTED: move the cursor to this option and press “ENTER” key to select all the songs
6) ALL DESELECT: move the cursor to this option and press “ENTER” key to cancel all the songs.

POINTS FOR ATTENTION:

1. Only the quality USB is acceptable to be used to assure normal converting
2. If this player does not support the USB used, this may cause abnormal converting, please turn off the power supply and use other brand USB for converting.

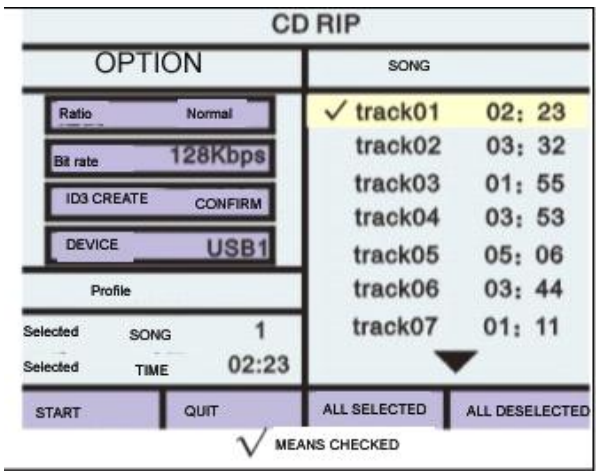

PDF created with pdfFactory Pro trial version www.pdffactory.com

PDF created with pdfFactory Pro trial version www.pdffactory.com

1. TV DISPLAY

- NORMAL/FULL SCREEN: When under wide screen, some part will be cut off automatically.
- NORMAL/MAILBOX: When under wide screen mode, the top and bottom of screen will show black belt.
- WIDE SCREEN: For this function item needs the support of disk.

2. ANGLE MARK

When recoded with multi-angle scene in disk, this option alive.

- ON: when play angle disk, a angle mark will display.
- OFF: close the angle mark display.

3. OSD Language

This option is used for subtitle language switch.

- English: the subtitle language on screen is English
- French: the subtitle language on screen is French
- Italian: the subtitle language on screen is Italian
- Spanish: the subtitle language on screen is Spanish
- Portuguese: the subtitle language on screen is Portuguese

4. Screen Saver

- ON: open the screen saver function
- OFF: cancel screen saver function

5. Last Memory

This player can memorize the previous breakpoint position, if the previous memory is ticked, the player will begin playing from the previous breakpoint automatically when replay.

- ON: start previous memory
- OFF: cancel previous memory

NOTE: no this function for MP3 and MP4.

AUDIO SETTING

Equalizer

- When you play the disk you can select None/Rock /PoP/Live/Dance/Techno/Classic/Soft.

3D Processing

- When you play the diskc you can select Off/Hall /Concert/Living Room/Bathroom/Cave/Arena/Church.

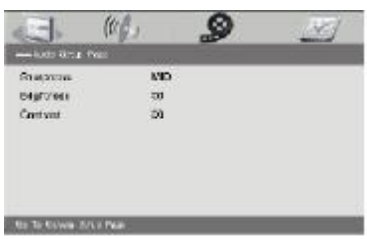

PDF created with pdfFactory Pro trial version www.pdffactory.com

VIDEO SETTING

When enter video setting screen, open the menu to carry out setting
for the video quality.
SHARPNESS, BRIGHTNESS, CONTRAST,

PREFERENCE

This option of “PREFERENCE SETTING” can be set only when the CD-DRIVER is empty or open or press STOP key two times.

1. TV Type

- PAL: set the TV as PAL mode
- AUTO: when play, the player will implement self-regulate to be consistent with the DISK.
- NTSC: set the TV as NTSC mode.

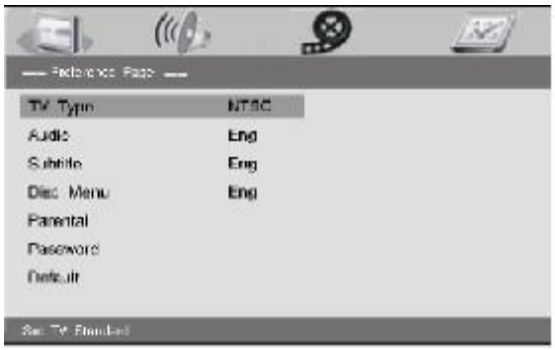

2. Audio/Subtitle/Disc Menu

Sound, Subtitle and Disk Menu Language If recorded with multi-languages, you may press menu key for setting, if no, this option invalid. The setting for Subtitle and Disk Menu Language is the same.

3. PARENTAL

This option can be used to set up group grade which is divided into several grades according to your requirement: For example: If the “CHILDREN GROUP” selected, the improper scene like violent will be prohibited to play. Press direction key to select ”CHILDREN GROUP” and press “ENTER” key, the TV will remind you to input password, after input, all the contents which children have no right to access to watch will be shielded. In group control volume, the groups are listed from low to high, the children group is at bottom, while the adult group is at the top. NOTE: this function needs the support of DISK.

4.PASSWORK

if this option selected, the password can be changed as required, the initial password is 000000.

5. DEFAULT VALUE

if selected, the system will be reset to factory default.（barring password and group control）

FAQ

When the following problems occur, you may refer to the following method for solution, if the trouble still can not be removed, you may contact professional person or local dealer as well as our company for solution, you must not open the cover for maintenance in case electric shock happens or heavier trouble:

PDF created with pdfFactory Pro trial version www.pdffactory.com

Fault	Removal method
Failed to play	● Assure that the label side of disk is upwards ● Check if the disk is compatible with player
No power	● Insert the DC terminal into jack of this player and insert other end into power socket
No color	● Set the TV mode as “PAL”
Remote control failure	● Check if the signal can go through player ● Refer to the OPERATION MANUAL of remote control for solution ● Check if the pole of battery has been mistaken ● The battery has been used up, change them with new.
No sound	● Connect audio line correctly ● Do not scratch or pollute the disk ● Check if the earphone has been inserted into jack. ● Check the volume, if low, turn up the volume
Abnormal video or sound	● Use normal disk.

TECHNICAL SPECIFICATIONS

Power supply	DC 12V 1500mA
Power consumption	10W
Weight	820g
Dimension	WXHXD=205X167X42 (mm)
Working temperature	5-35℃
Relative humidity	5%-90% (no dew)
DISK TYPE	DVD VIDEO
	MPEG 4
	SUPER VCD
	VCD1.0,1.1,2.0
	CD-R,DVD-R
	MP3
	CD-RW
OUTPUT	Stereo output
	Video output
INPUT	Audio/video input
Peripheral device	USB, U-flash disk, SD/MS/MMC CARD
Battery	Li-Poly batteries

PDF created with pdfFactory Pro trial version www.pdffactory.com

- **the weight and dimension are approximate value**
- **Adhering to tenet of "always endeavoring to do still better", Specifications change like design are subject to change without notice**
- **Our company can not assure that the poor disk can be played smoothly**
- **For special disk, some functions may be false, this is normal.**

Specifications change like Operation Manual and Product appearance are subject to change without notice.

FEATURES

- Portable DVD Player with Rotation Screen with Car Reader & USB
- 7'' TFT LCD screen (4:3/16:9), 480x234 pixels
- Compatible with MPG–4, AVI, DVD, VCD, CD, JPEG
- SD/MMC/MS Card Reader
- USB Port to connect to flash disks
- NTSC/PAL system
- AV in from other electronic devices such as a monitor
- AV out to TV or audio system
- Program, search, repeat, stop resume, fast forward, fact reverse, skip
- Zoom, slow motion, single–step, multi–angle playback
- Parent lock, automatic screen protection
- Built–in double speakers with high quality stereo sound
- Built–in Li–Ion Battery

CONNECTORS

- AV Output
- AV In
- Earphone

POWER SUPPLY

- DC IN 12V ⎓ 1.5A

PDF created with pdfFactory Pro trial version www.pdffactory.com